

CALIBRE DOUBLE TOWEL GRAB RAIL

Ergo 25mm Diameter Double Towel Rail




STOCK CODES

25mm Ergo 600mm - REIT60


25mm Ergo 900mm - REIT90




TOP

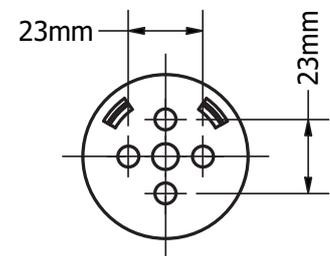

WALL BRACKET

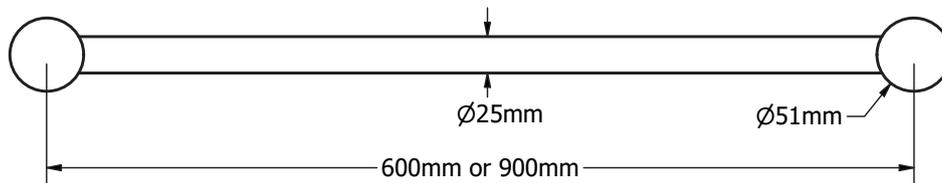

FRONT

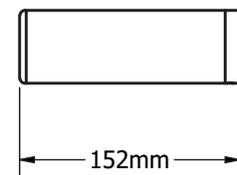


SIDE

AVAIL QUALITY DESIGNS

- Australian Made, Owned and Designed
- Sizes: 300 - 1200mm Lengths as standard, longer available by request
- Scratch resistant high grade extra polished stainless steel for a chrome finish, available in a range of finishes
- Modular design, the rail to be mounted horizontally, vertically or at any angle and cut down to suit your bathroom
- 150 kg capacity for all 25mm and 32mm diameter calibre grab rails
- Ergo 25mm diameter rails are suitable for heavy duty towel rails and smaller hands, in non-DDA bathrooms



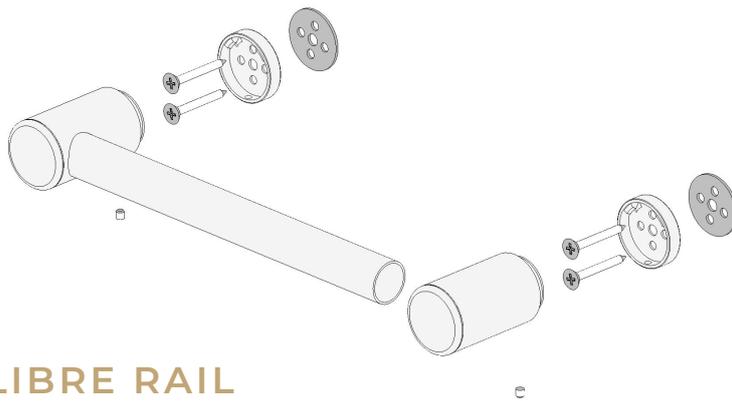


CONTENTS:

- 2 x Wall Seal
- 2 x Wall Brackets
- 4 x Stainless Screws 12g x 50
- 2 x Grub Screws M6 x 5
- 2 x Grab Rail

CALIBRE RAIL INSTALLATION INSTRUCTIONS

1. Locate wall studs, install into at least one stud. Place wall seal/mounting bracket on wall at correct height over centre of stud and mark hole positions on wall (minimum 2 supplied screws per bracket).
2. Drill pilot holes into wall stud approximately 50mm deep to suit mounting screws (and wall plugs if required).
3. Apply small amount of silicon to mounting bracket and wall in and around the screw holes.
4. Install mounting brackets by screwing onto wall
 - Tip: use appropriate mounting screws for the wall stud material, supplied screws are for timber wall studs, one larger bugle screw can be used in centre hole.
5. Slide rail tube into end bracket and push onto wall brackets.
 - Tip: rail length can be cut down to a smaller size, simply use an angle grinder, hacksaw or pipe cutter then deburr the end with a file or grinder and reinsert into the end bracket.
6. Tighten grub screws with Allen key.
 - Tip: if rail rattles, loosen end bracket, twist slightly and tighten.

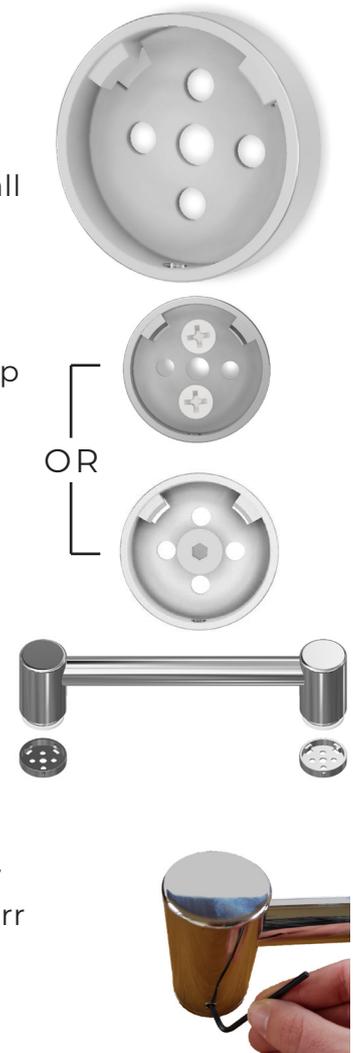

WARNING:

These rails are designed to be mounted onto wall studs or masonry walls. Installation is recommended to be completed by qualified tradesperson who complies with the AS 1428.1-2009 Design for Access and Mobility standard. It is recommended rail location is determined by a qualified Occupational Therapist or trained professional to the AS 1428.1-2009 standard. Correct installation is required to ensure safe, long term operation. Incorrect mounting can result in reduced capacity of the rail which can result in injury to user and damage to the wall.

